

Designed by GamFratesi

PRODUCT

COLORS

TBD

SAMPLE PICTURES



DESCRIPTION

The MASCULO Collection is a chair series with upholstered seat and back in 2 seperate parts. The chair comes in a lounge-, diner- and swivel base version. The structure of the chair is made of 12mm steel tubes which is either powdercoated or chrome plated. The swivel base have four legs and are able to turn 360degrees around center. The back rest is moulded, fireproof polyurethane foam. The seat is upholstered, moulded plywood. The chair is always fully upholstered in fabric or leather.

VERSION - FULL-UPHOLSTERED

RAL codes are indicative.

- Upholstered in fabric/leather/ Chrome base// /High Gloss
- Upholstered in fabric/leather/ Black painted base // / RAL 9005, gloss level 10

FACTS

MEASUREMENT - W x D x H mm

Seat width: 470 mm

Seat height: 460 mm

Armrest height: 670 mm

Chair width: 690 mm


Frame height: 330+245 mm

CHAIR VERSION

Order item - look for part number in the pricelist.

The series consists of the following:

 $\textbf{MASCULO CHAIR-Steel sledge} \ \textbf{base in either black powder coated or chrome plated}$ MASCULO LOUNGE - Steel sledge base in either black powder coated or chrome plated MASCULO SWIVEL -Swivel base in either black powder coated or chrome plated

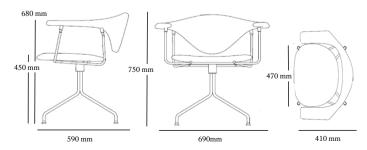

Sitting height: 450 mm

Seat depth: 410 mm

Chair depth: 590 mm

Chair height: 750 mm

Frame thickness: Ø12 mm

Seat upholstered: 35 mm

WEIGHT ITEM

11,2 kg

PACKAGING TYPE

Cardboard box

PACKAGING MEASUREMENT - LxWxHCM

L:73 x W:58 x H:78 cm

WEIGHT PACKAGING - MATERIAL TYPE

- Delivery note: 5 g
- Cardboard box, FEFCO quality EB85BB: 2200 g
- Cardboard extra bottom: 0 g
- Polybag PE: 200 g
- LD-EPE foam protector: 50 g
- Strapping: 10 g

WEIGHT PACKAGING - TOTAL

13,7 kg

NUMBER OF PARCELS



ACCESSORIES

- PLASTIC GLIDERS ARE STANDARD.
- FELT GLIDERS ON REQUEST.

CLEANING AND MAINTENANCE

For cleaning the upholstered surface, first try to brush off the dirt gently. If this is not enough then vacuum the

If further cleaning of the padding is needed, a stain remover is recommended. The cleaning has to be gentle and must always be tested on the most invisible area of the surface before the actual cleaning. Avoid blotches by gentle, circular rubbing towards the stain.

To avoid stains, quickly remove the dirt with a piece of absorbing household wipe and clean with water and colourless washing-up liquid.

Do not use the following products for the padding:

- Undiluted cleaning liquids.
- Bleach.
- Ammoniac.
- Soap for hard surfaces.

For dusting and light cleaning of the frame use a soft, dry cloth.

For further cleaning of the frame, use a soft cloth that is firmly wrung in clean water for gently wiping the surface, and then immediately use a dry cloth to wipe the surface again.

surface, and then miniculately use a dry down to where the stance again, and the more thorough cleaning is necessary, use a mild detergent or washing-up liquid dissolved in water on a firmly wrung cloth to wipe the seat. Afterwards, repeat the process with clean water as described above.

Polish with a soft cloth after wiping.

Do not use materials for maintenance that:

- Contain abrasive agents.
 Are basic, acidiferous or organic.

For the best maintenance of the product, protect it against sunlight and heat, and try to keep it away from moisture, grease and other dirt.
Furthermore, protect the surfaces against sharp objects and other that might scratch.

ENVIRONMENT

Parts can be separated and sorted for recycling.

Disposal of plastic type PP may be done with incineration of waste.

TESTS

FOAM:

Back upholstery: BS 5852: Part 2: 1982 Using the flame retardant polyester fabric and crib ignition source 5 as specified in the Furniture and Furnishings (Fire)(Safety) Regulations 1988, Schedule 1, Part I (Great Britain)

CERTIFICATION AND LABELS

FABRIC/LEATHER CONSUMPTION

- Fabric: 140 cm x 1.59 m

- Leather: 1,77 m²/19 sqf

Combination of fabric back rest and leather seat:

- Fabric: 140 cm x 0,93 m

- Leather: 0,54 m²/6 sqf



Product Information 3/3 16-02-2016 Document no.: 04-05-006-04